# **ELKO Wireless Light Switch**

## **BEW-WLS4**



Smart-house transmitter for building automation applications 4 individually programmable pushbuttons 3 V battery supply (CR2032) Channel programming using BGP-COD-BAT Wall mounting Range up to 100 m in open air Battery life: up to 5 years at normal use



INPUT SPECIFICATIONS		SUPPLY SPECIFICATIONS	
Wireless push-button Transmission frequency	868 MHz	Power supply	Battery: CR2032
	GENERAL SPE	CIFICATIONS	
Channel coding	By BGP-COD-BAT and special cable: GAP-TPH-CAB. After mounting reprogramming can be done by removing the slim cover and using the attached adapter	<i>Environment</i> Protection degree Pollution degree Operating temperature Storage temperature	IP 20 3 (IEC 60664) 0-50°C/32-122°F -20-70°C/-4-158°F
Out 1-4	for the GAP-TPH-CAB cable. <b>1-4</b> Push-button 1-4	Humidity (non-condensing)	20 - 80%
Enclosure	(ELKO)	Weight Dimensions	50 g – without battery 86 x 86 x 24 mm (including frame)

### **MODE OF OPERATION**

The BEx-WLS4 light switch is designed for base unit BH4-WBUx-230and will only function with this unit.

The wireless BEx-WLS4 light switches are programmed as standard light switches BEx-WLS4 using a BGP-COD-BAT (see data sheet for this unit).

The communication between BEx-WLS4 light switches and the BH4-WBUx-230 base is established in the following way:

- Push the "Mode" button on the BH4-WBUx-230 base until the red LED indicates association. Push the push-button on the BEx-WLS4 light switch module that you want to associate with the BH4-WBUx-230 base.

Once the association is complete, all 4 LEDs will light up briefly (approx. 1 second).

If the association fails, e.g. because the range is exceeded, all LEDs in the light switch module will light up simultaneously for approx. 500 ms. This also occurs if, under normal circumstances, it is not possible to establish con-

nection between the BH4-WBUx-230 base and the BEx-WLS4 light switch modules.

It is possible to disable the communication between the BH4-WBUx-230 base and all the modules with which it is associated. - Push the "Mode" button on the base until the red "Disable" LED

is lit. This means that there is no connection between the BH4-WBUx-


230 base and its associations. To reestablish the connection, push "Mode" until neither neither

BH8-CTRLZx-xxx

"Associate" or "Deactivate" are lit. Under normal circumstances, the "Supply" and "Dupline" LEDs will be lit continuously, whereas the LED for "Communication" only blinks briefly when you push an associated BEx-WLS4 light switch.

The LEDs always follow their allocated push-button and cannot be programmed individually or removed.

The LED indication provides confirmation that the communication is successful.

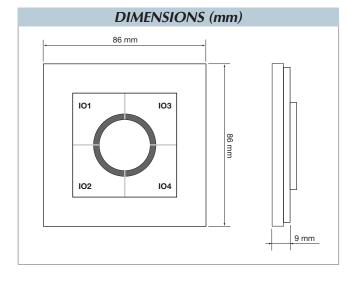

# 0.0000 o**\\_\_\_**/o

WIRING DIAGRAM

## **TYPE SELECTION**

Colour

White

Supply by smart-house

Ordering no. **BEW-WLS4 BEG-WLS4** Light grey Antracit grey **BEA-WLS4** 

#### ACCESSORIES

Programming cable to BGP-COD-BAT

GAP-TPH-CAB